



Bed Head DIY Pack Instructions

Double & Queen Size Pack Contents

1 x Panel of your choice
1 x full length Border
2 x half length Borders
1 x full length Cornice Mounting Strips
2 x smaller lengths of Cornice Mounting Strip
2 x corner rosettes
1 x pack of 20 nails

King Size Pack Contents

1 x Panel of your choice
1 x full length Border
2 x half-length Borders
1 x 3mm Capping cut to required width lengths
1 x 3mm capping cut to height lengths
2 x corner rosettes
1 x pack of 20 nails

Tools Required

Plywood/MDF Timber lengths cut to size
Marking pen
Tin snips
Liquid Nails
Wooden moulding tools
Hammer
Drill & suitable screws


CAUTION SHOULD BE USED AT ALL TIMES AS METAL EDGES ARE VERY SHARP.

Installation instructions are a guide only, all care and no responsibility will be undertaken by Pressed Tin Panels® for incorrect assembly of the bed head. If further assistance is required please phone 02 6332 1738 or email info@pressedtinpanels.com

NOTE: Ply/MDF board must be cut to desired size i.e. width of panel + width of both borders, height of panel + width of border along top edge. Lengths of MDF must be cut to desired length to create legs, then screwed and glued into place at around approx. one quarter total width from each end.

Installation

1. Lay the Cornice Mounting Strips or capping around the edge of the base board with the rolled edge running around the outside. Glue and nail into place, this helps to hold the Border in place.

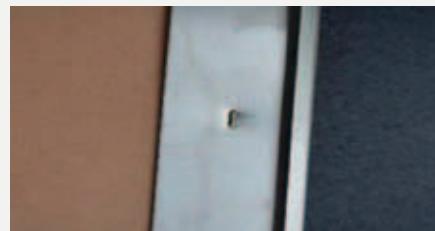

2. Lay the Borders around along the inside of the mounting strips or capping with the flat 'under' edge towards the center of the base board—the full length border at the top and the two half lengths at each side.
3. Place Corner Rosette into position at each corner join, again slipping the outer edges underneath the mounting strip. Once you are happy with the position of the rosettes and the borders, you can glue and nail the border into place.



4. Now nail the Rosette on the inside corner—it will be covered by the main panel. Repeat for the second rosette.



5. Once Mounting strips or capping, Borders and Rosettes are securely in place 'check measure' the space for the centre panel. Trim panel, top corners etc if necessary.
6. Apply Liquid Nails to base board generously, be sure not to go too close to the edge of the border to avoid any excess glue seeping through the join. Place your trimmed panel onto the prepared base board, levelling as you go. Apply pressure across the entire panel with anything handy, as pictured, as the glue dries.



7. Your Pressed Tin Panels® Bed Head is now complete, a clear sealer can be applied or a coat of primer and your choice of paint effect may also be applied.

